

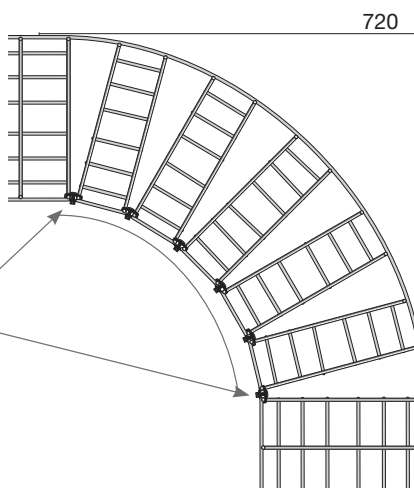
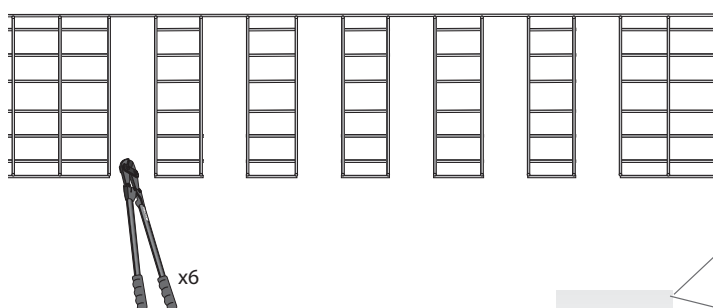
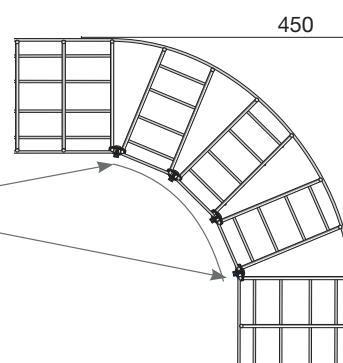
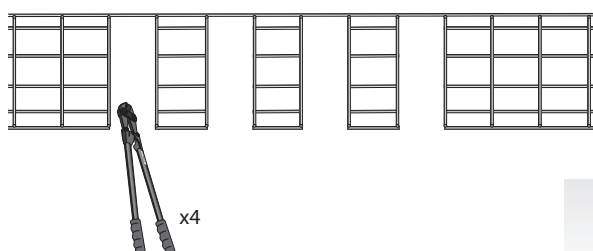

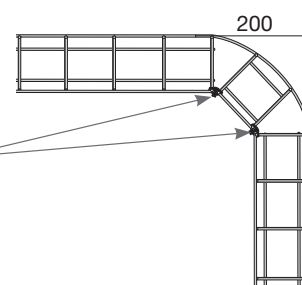
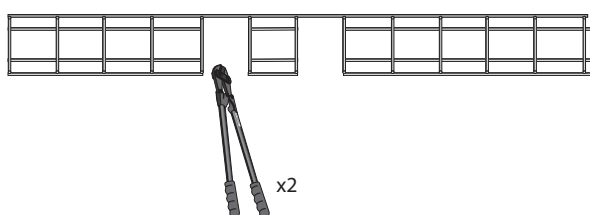

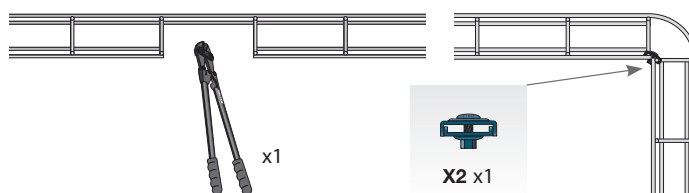
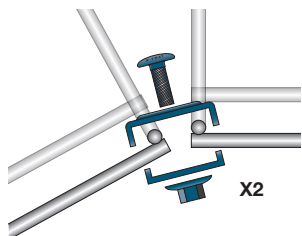


# MONTERINGSANVISNINGAR


RADIE **X2**

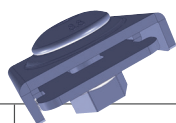

## RADIE **X2**

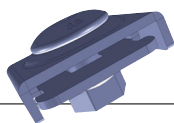


420

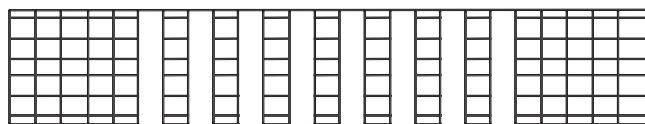


x8

980

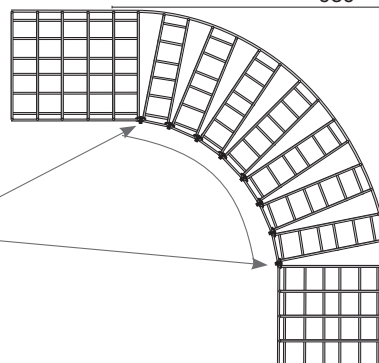


X2 x8

520

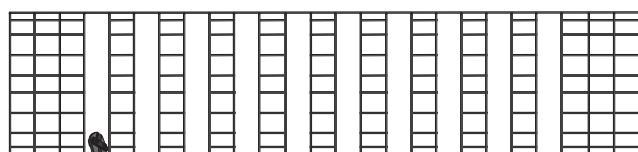


x10

1220

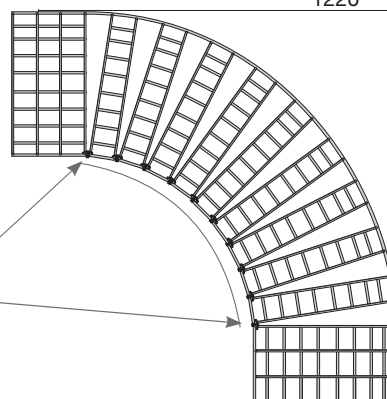


X2 x10

620

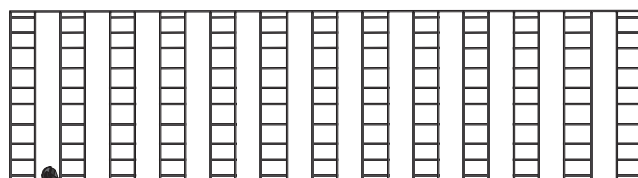




x12

1490

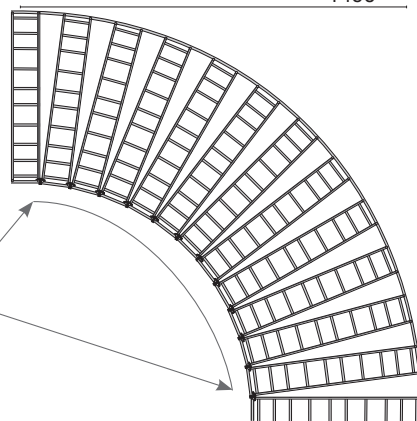

X2 x12



## T-KORSNING **X2**

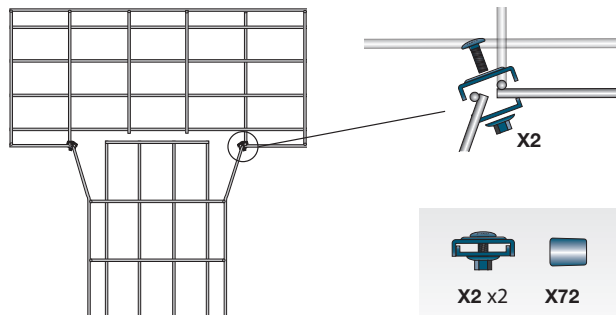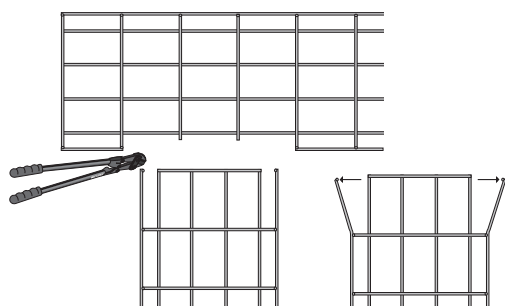

**X2 x2**



**X72**

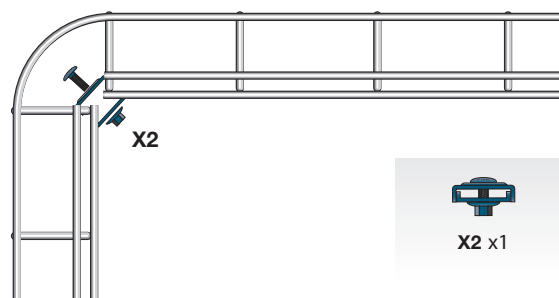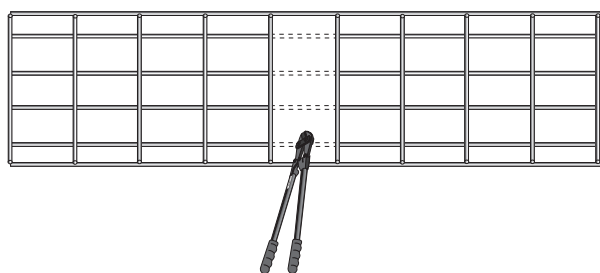

**X2 x1**